



- TELESKOPIK RAYLI ÇÖP KOVALARI MONTAJ ŞEMASI (SAĞ)
- WASTE BIN'S WITH TELESCOPIC RAIL MOUNTING INSTRUCTIONS (RIGHT)

1.1

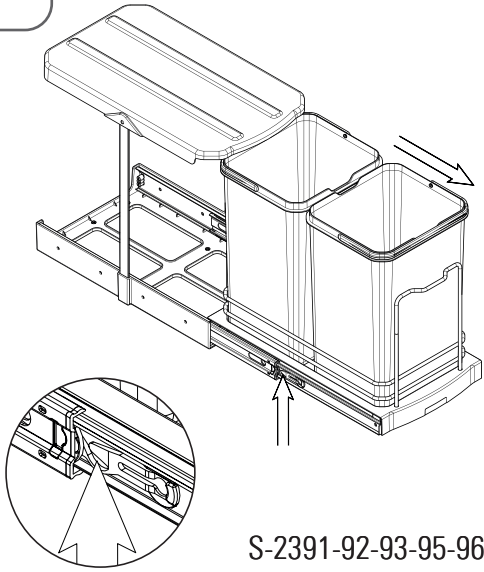


S-2391-92-93-95-96-  
S-2571-72-73-74-

1.2

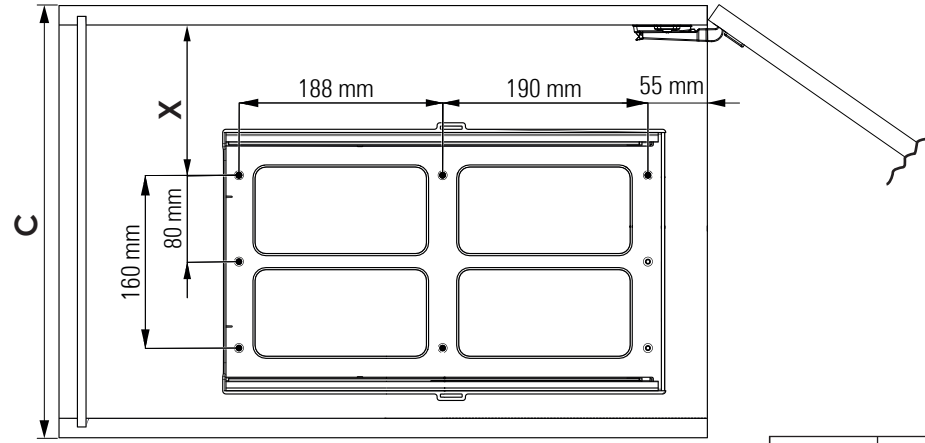


	C	X
MANUAL	350	77
AUTOMATIC	400	140

1.3

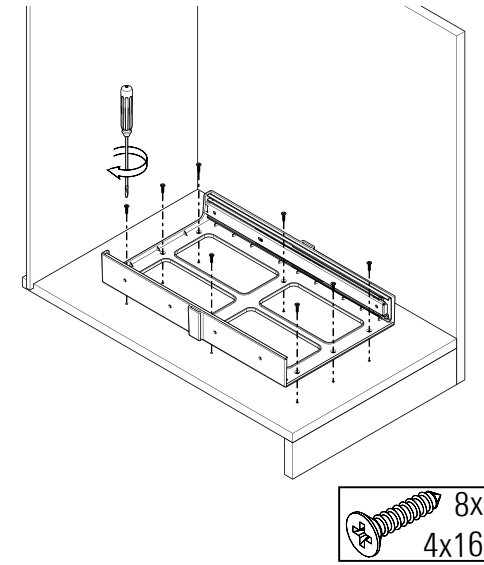


8x  
4x16

2.1

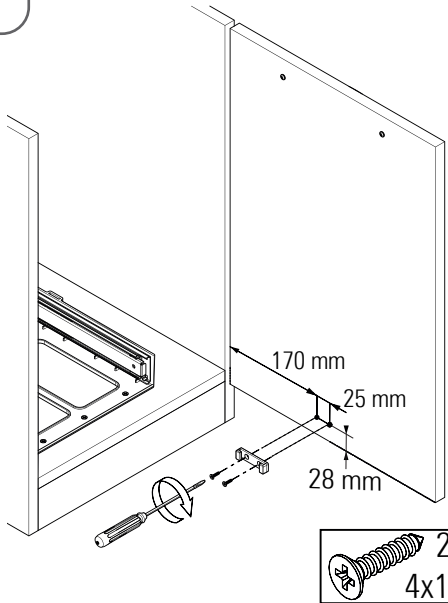


2x  
4x16

3.1

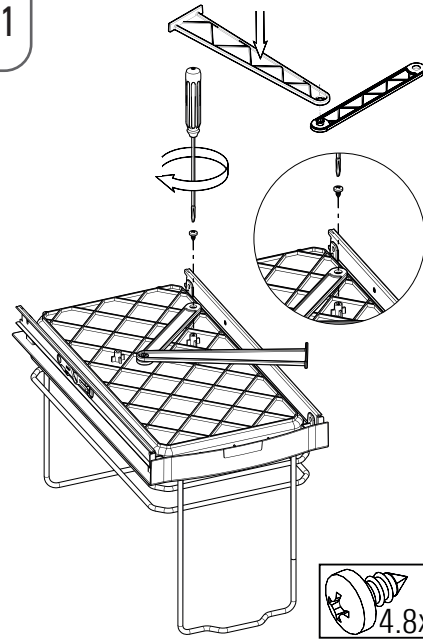


1x  
4.8x9.5

4.1

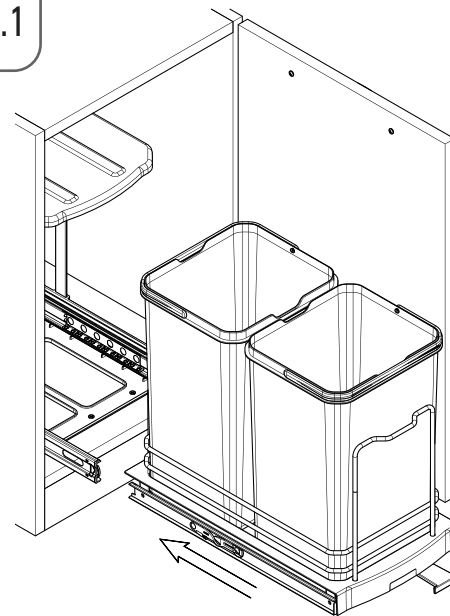


4.2

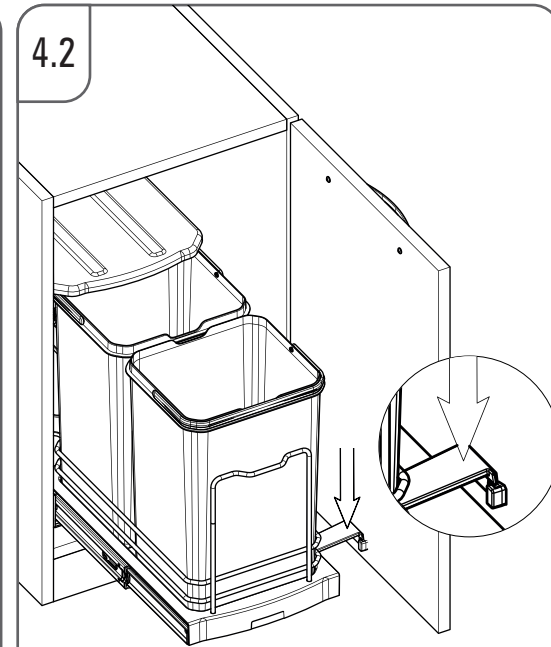


- TELESKOPIK RAYLI ÇÖP KOVALARI MONTAJ ŞEMASI (SOL)
- WASTE BIN'S WITH TELESCOPIC RAIL MOUNTING INSTRUCTIONS (LEFT)

1.1

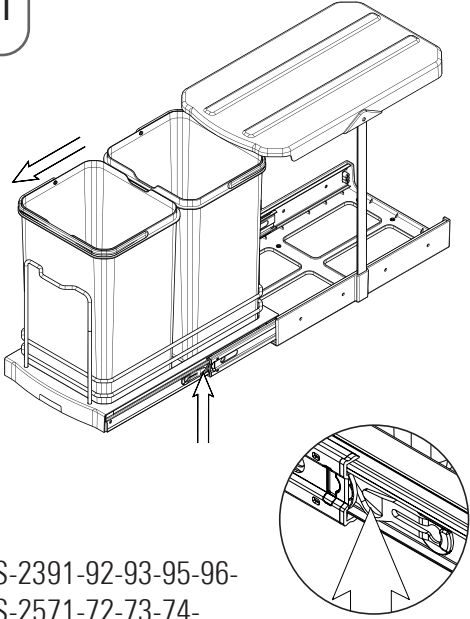


S-2391-92-93-95-96-  
S-2571-72-73-74-

1.2

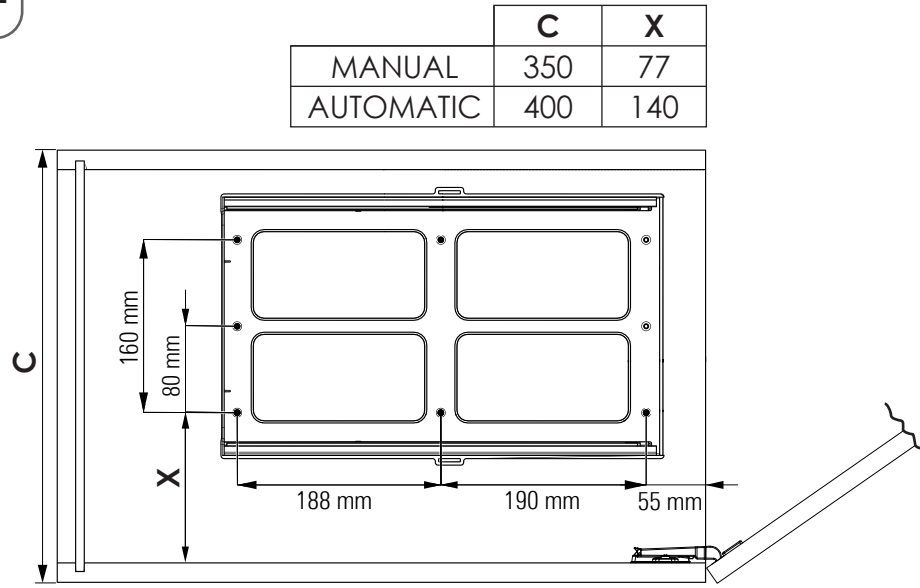


1.3

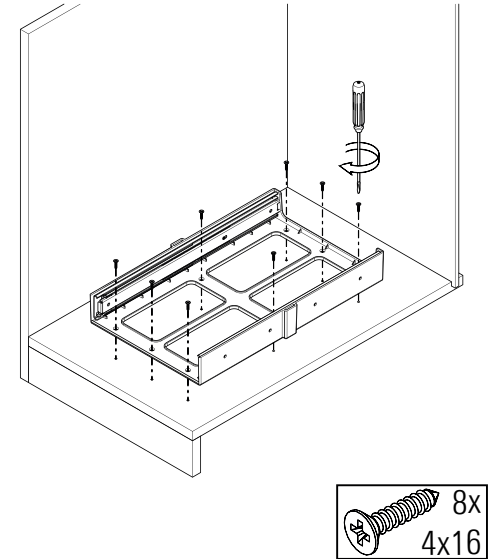


8x  
4x16

2.1

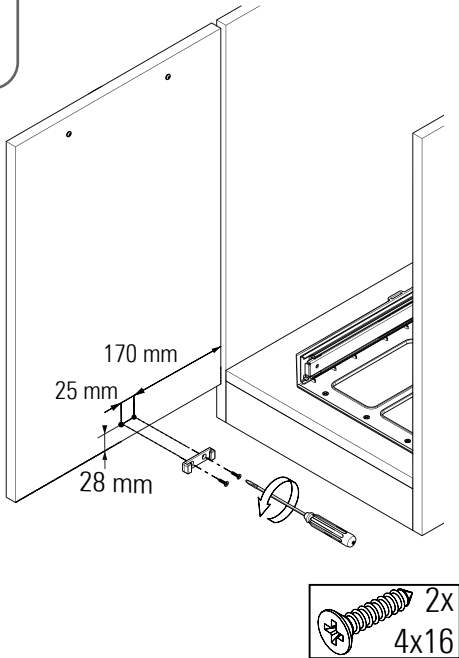


2x  
4x16

3.1

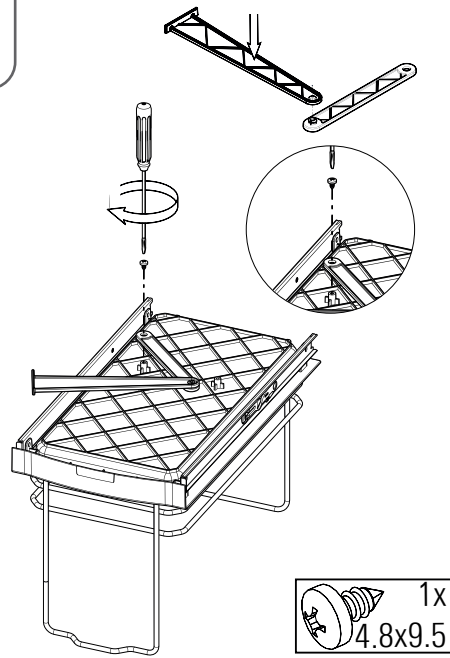

1x  
4.8x9.5

4.1

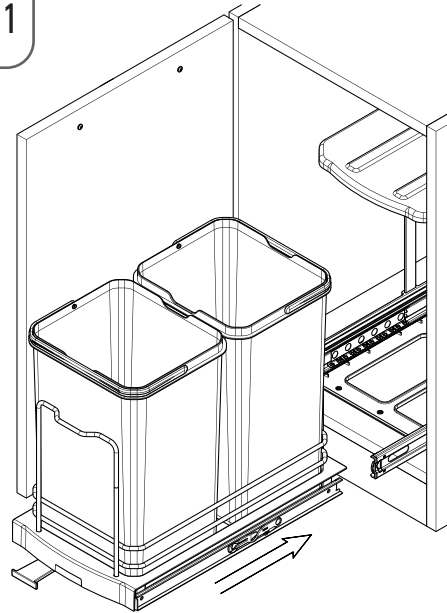

4.2

